



MORE CHOICES MORE FLEXIBILITY



CLIM8ZONE™ | Balboa's Flagship Heat Pump



CLIM8ZONE™ II | Hello Compact!

3 speed modes:

- 1 - Auto Smart (Default)**
 - For heating or cooling.
 - Uses artificial intelligence.
 - Variable heating/cooling capacity.
 - The CLIM8ZONE™ computer automatically adjusts the compressor frequency up or down using an algorithm that is based on ambient air temperature and water temperature.
 - This algorithm balances a best case in most conditions for efficiency and noise vs heating/cooling output of the CLIM8ZONE™ unit.
- 2 - Manual High (Only available on CLIM8ZONE™)**
 - For heating or cooling.
 - Highest heating capacity.
 - Fastest water heating/cooling.
 - Low COP (i.e. Low Energy Efficiency).
 - High compressor frequency – Fixed, i.e. does not adjust based on environmental conditions.
- 3 - Manual Low (Only available on CLIM8ZONE™)**
 - For Heating or Cooling.
 - Lowest Heating/Cooling Capacity.
 - Slowest Water Heating.
 - High COP (i.e. High Energy Efficiency).
 - Low Compressor Frequency – Fixed, i.e. does not adjust based on environmental conditions.

4 CLIM8ZONE™ modes:

- 1 - Heat and Cool**

This mode heats and cools the spa water with the CLIM8ZONE™ unit enabled.
- 2 - Heat Only**

This mode only heats the spa water. All cooling with the CLIM8ZONE™ unit is disabled.
- 3 - Cool Only**

This mode only cools the spa water. All heating on the spa is disabled.
- 4 - Disabled**

The CLIM8ZONE™ unit is disabled.

4 eHeater modes:

Modes 1 - 3 are manually selectable.

- 1 - Continuous**

The electric heater (eHeater) is continuously enabled.
- 2 - Auto**

Auto mode activates the electric heater if the water temperature at the start of heating is at least 10 °F below the set temperature.
- 3 - Disabled**

The electric heater is continuously disabled.
- 4 - Enabled**

The electric heater is continuously enabled. This setting is selected automatically when CLIM8ZONE™ mode is set to "Disabled."