

High&Dry Assembly Instructions



Mobile Washing Line

1850mm


Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.

High&Dry Assembly Instructions

Components Supplied

Please use this guide if you require replacement parts

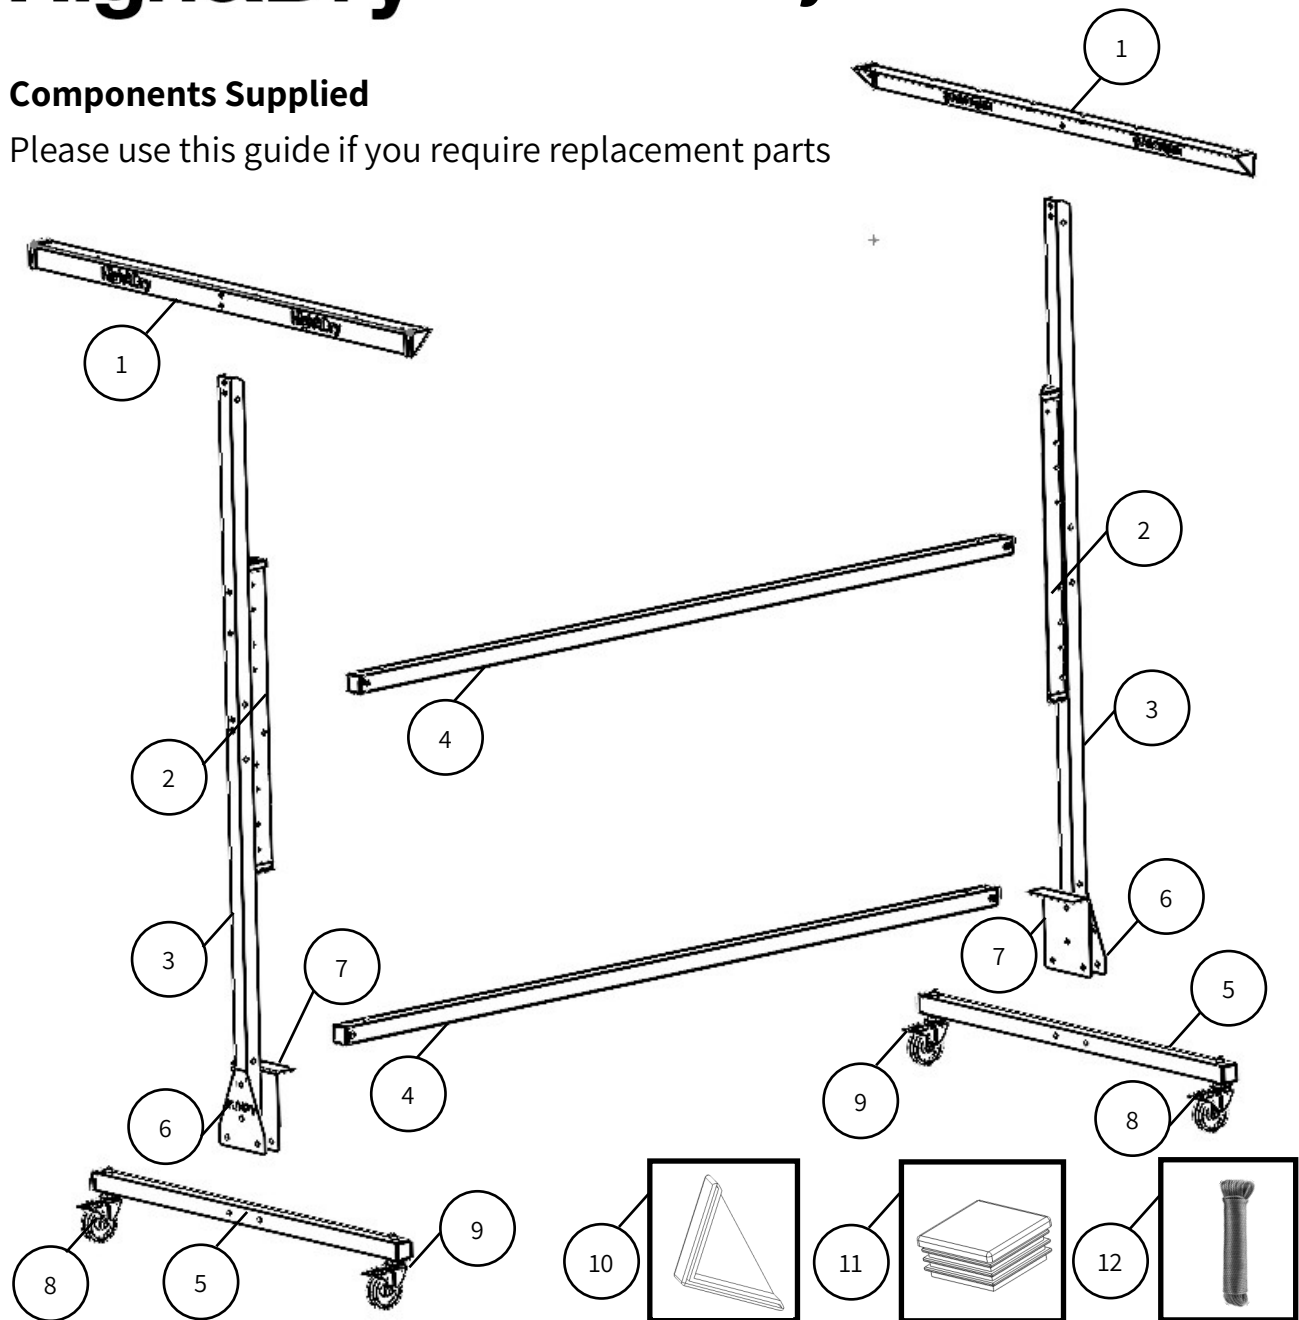

Ref	Name	Qty
1	Top Horizontals	2
2	Bottom Horizontals	2
3	Upright	2
4	Crossbar	2
5	Bottom	2
6	Flat Bracket	2

Ref	Name	Qty
7	Folded Bracket	2
8	Wheel Braked	2
9	Wheel Unbraked	2
10	Angle End Caps	8
11	Square End Caps	8
12	Washing Line	2









Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.

High&Dry Assembly Instructions

Components Supplied


Please use this guide if you require replacement parts

			10	20	30	40	50	60	70	80	90	100	110
Ref	Dimensions	Qty											
A	M10x100	4											
B	M10x65	20											
C	M10 Large	12											
D	M10	24											
E	M10 Small	8											
F	M8 Tee Nut	32											
G	M8X16	32											
H	M5 Simplex Clamp	4											

Tools Supplied

Please use this guide if you require replacement parts

Ref	Dimensions	Qty
X	Small Hex Key	1
Y	Spanner	1
Z	Large Hex Key	1

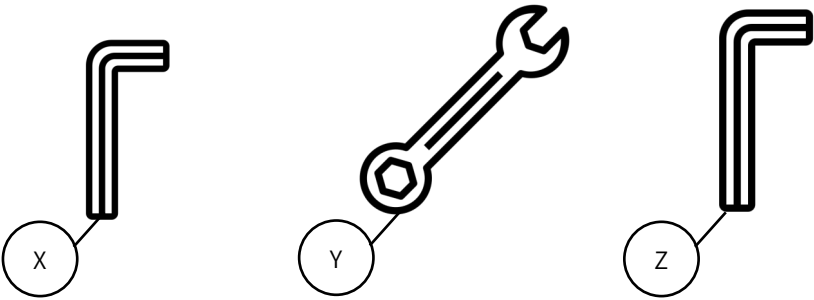


Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.

High&Dry Assembly Instructions


1

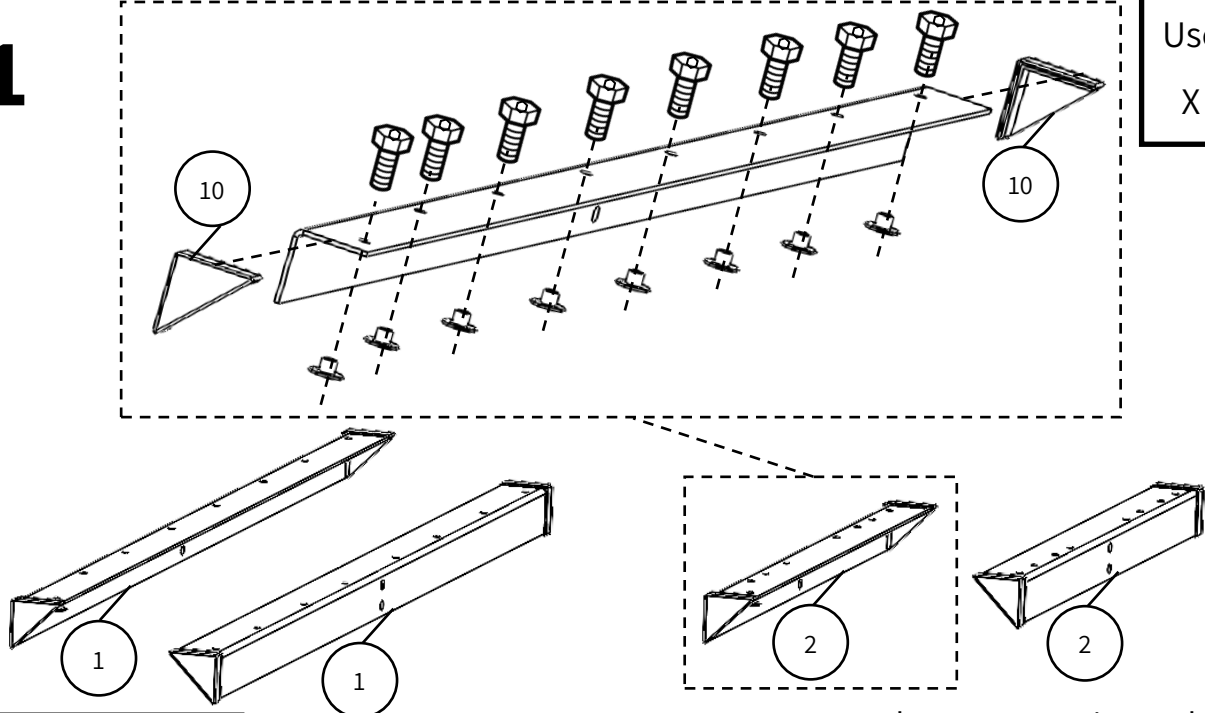

Fx32, Gx32

Mount Tee Nuts to Top and Bottom Horizontals.
Mount Angle End Caps to Top and Bottom Horizontals

2

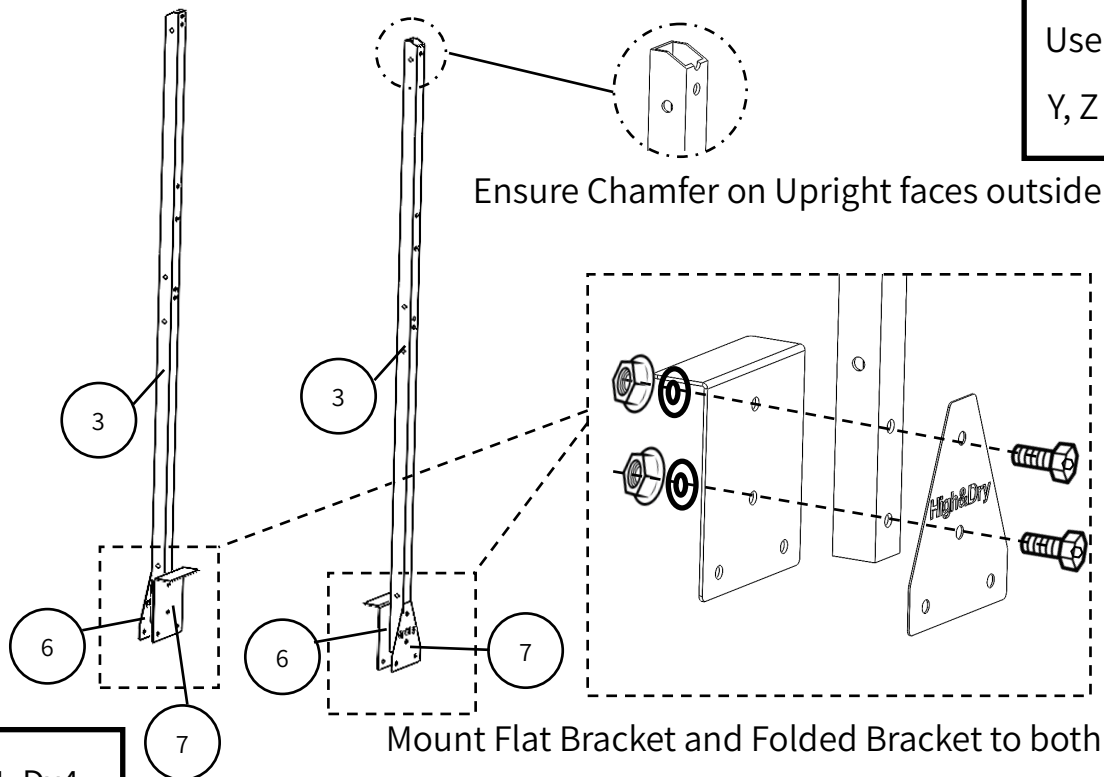

Bx4, Cx4, Dx4


Mount Flat Bracket and Folded Bracket to both
Uprights, bolting from outside. Leave bolts loose fit

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.

High&Dry Assembly Instructions

3

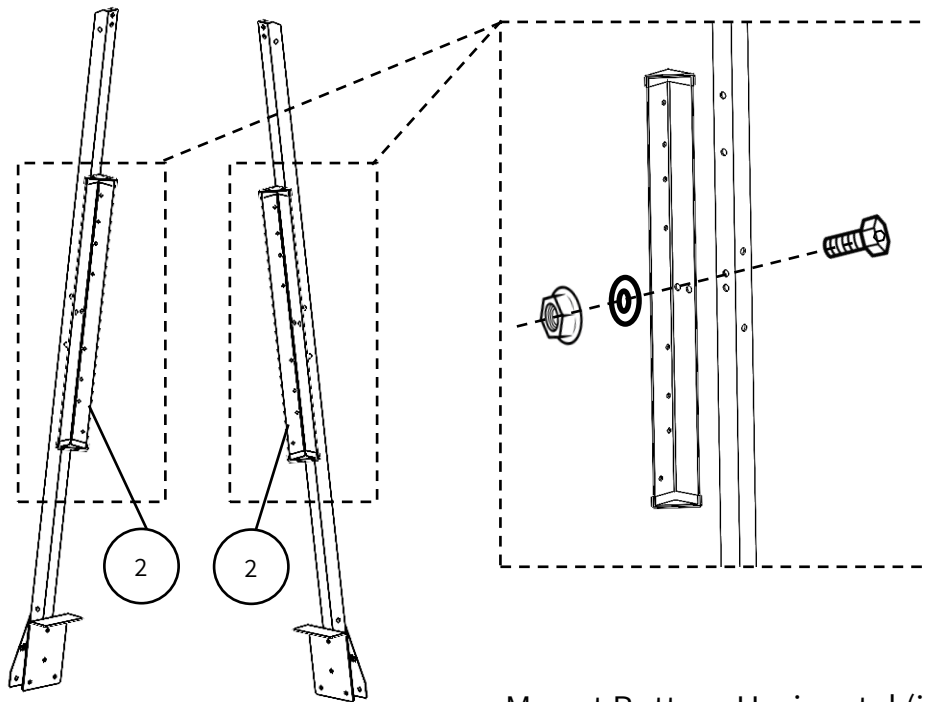


Use
Y, Z

Bx2, Dx2, Ex2

Mount Bottom Horizontal (inner hole)
to both Uprights (top hole), bolting from outside

4

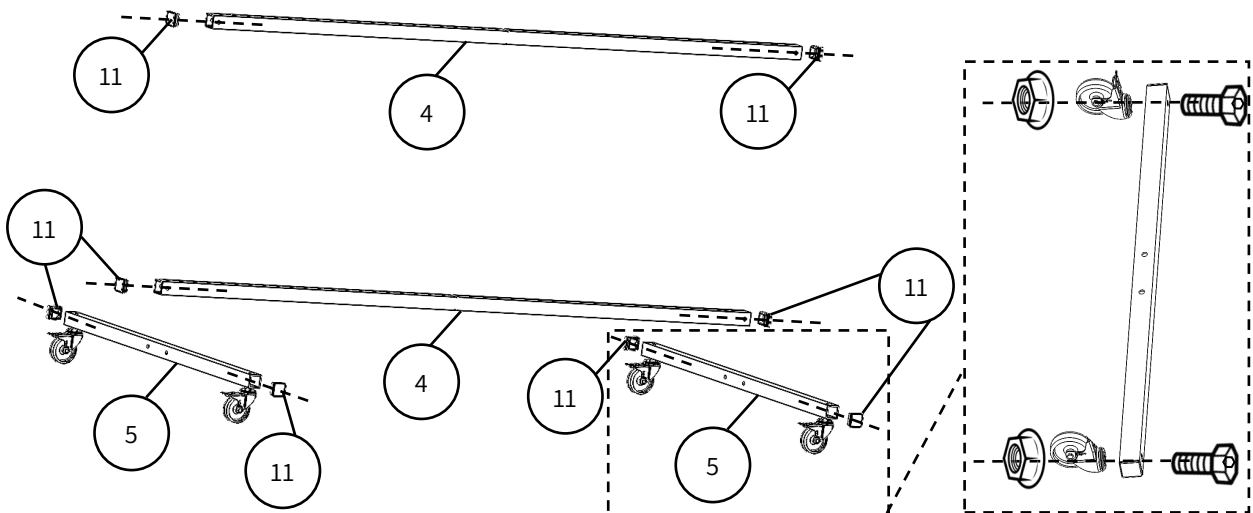

Use
Y, Z

Bx4, Dx4



Mount Square End Caps to Crossbars and Bottoms.
Mount **one** Wheel Braked and **one** Unbraked to each Bottom

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.


High&Dry Assembly Instructions

5

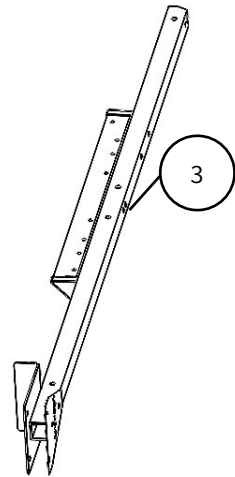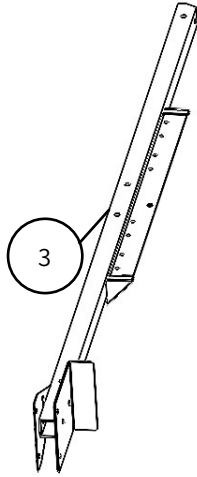

Lay out Uprights flat on the ground

6

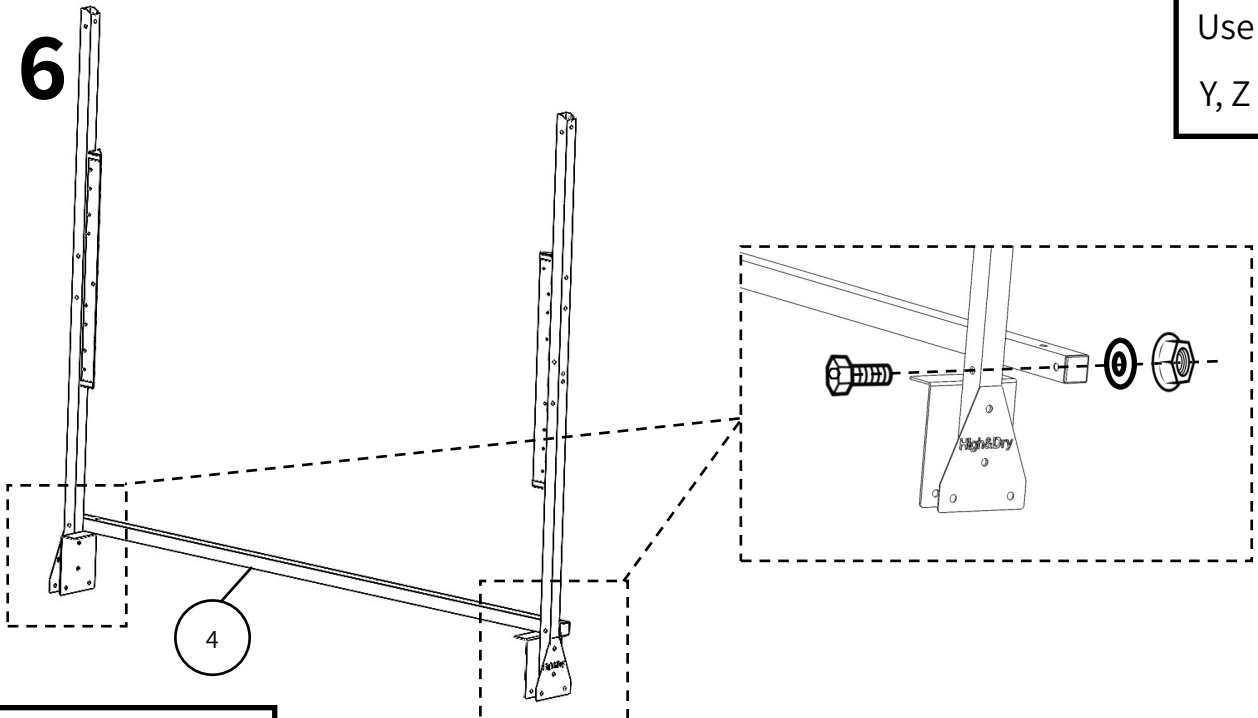

Use
Y, Z

Ax2, Cx2, Dx2

Mount Crossbar to both Uprights from **underside**


Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.

High&Dry Assembly Instructions

7

Use
Y, Z

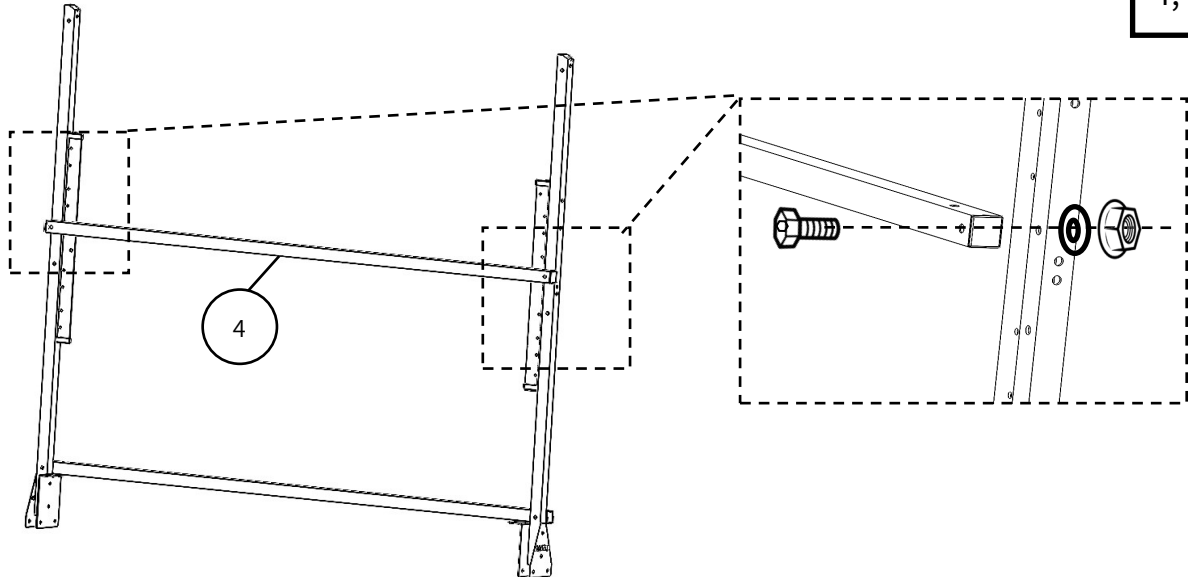


Ax2, Cx2, Dx2

Mount Crossbar to both Uprights from **topside**

8

Use
Y, Z

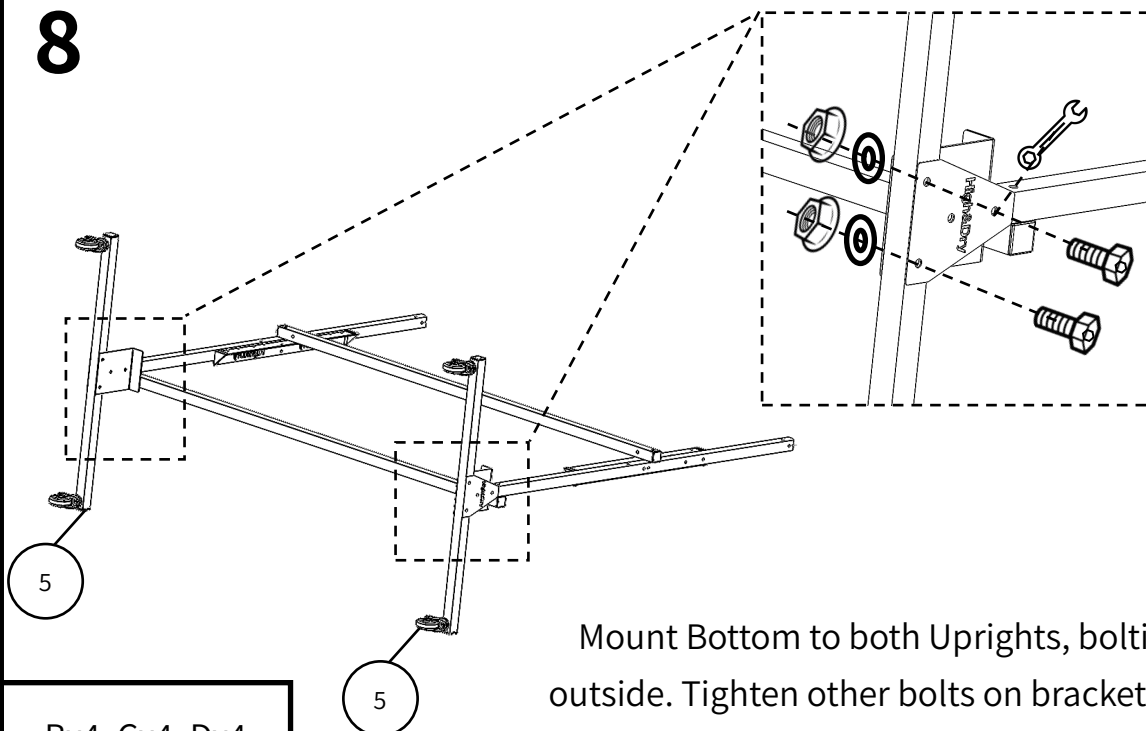

Bx4, Cx4, Dx4


Mount Bottom to both Uprights, bolting from outside. Tighten other bolts on bracket. Ensure one Wheel Braked to each diagonal for locking

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.


High&Dry Assembly Instructions

9

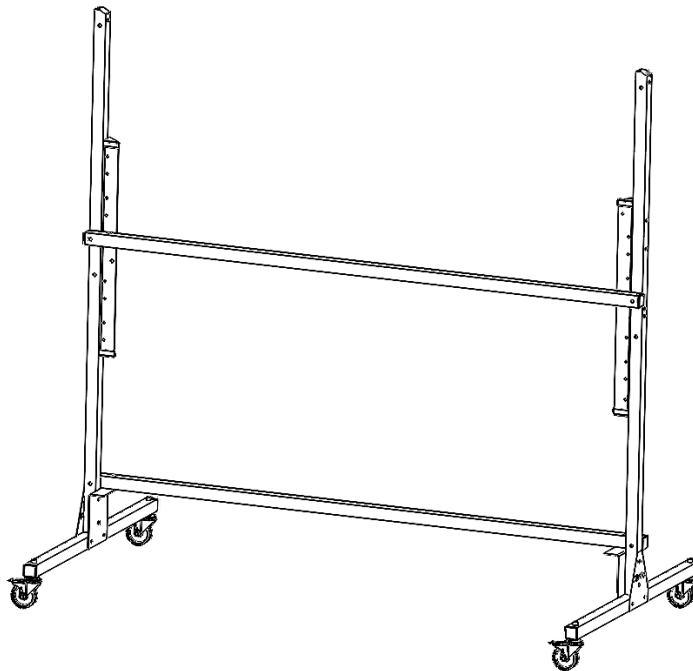

Rotate from ground position into upright position

10

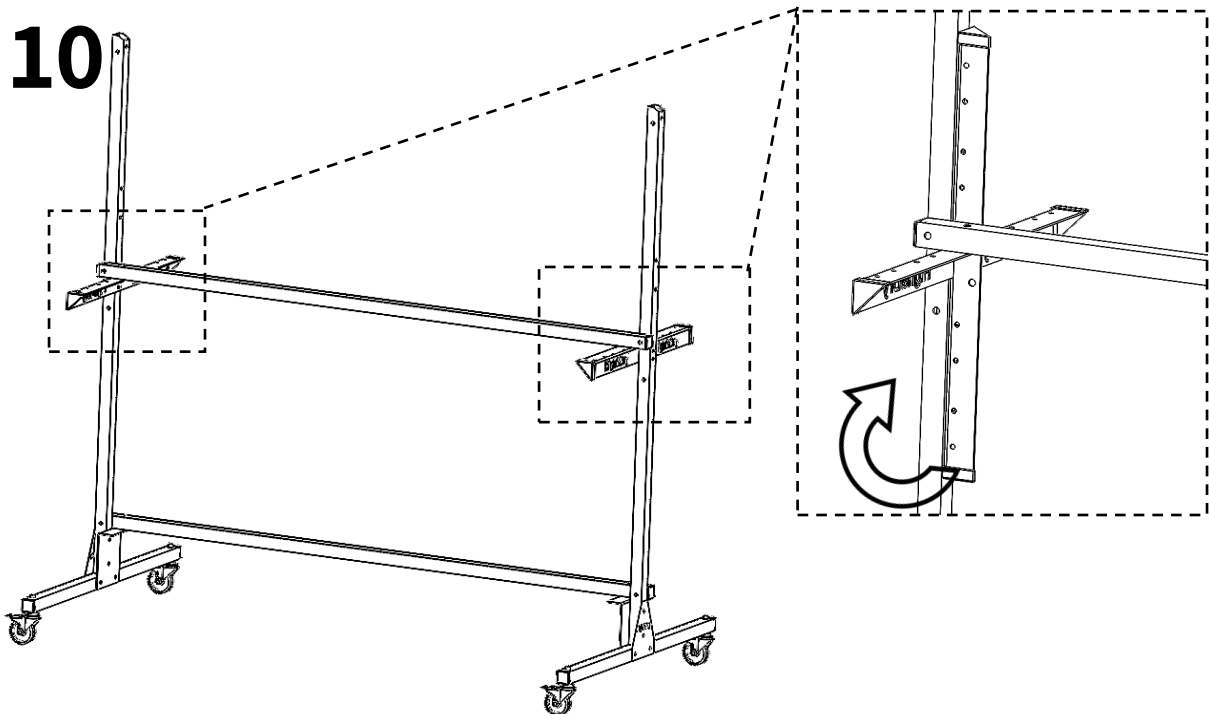

Rotate Central Horizontals perpendicular to original position


Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.

High&Dry Assembly Instructions

11

Use
Y, Z

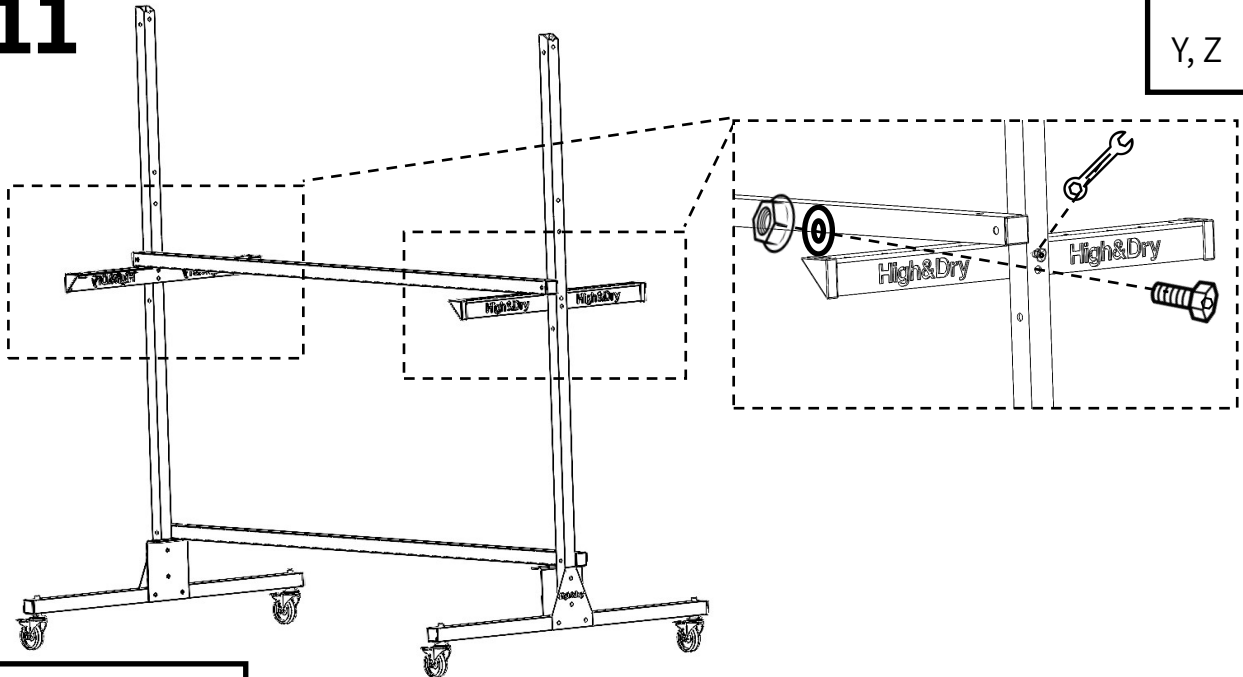


Bx2, Dx2, Ex2

Bolt Central Horizontal to Upright. Also tighten bolt above

12

Use
Y, Z

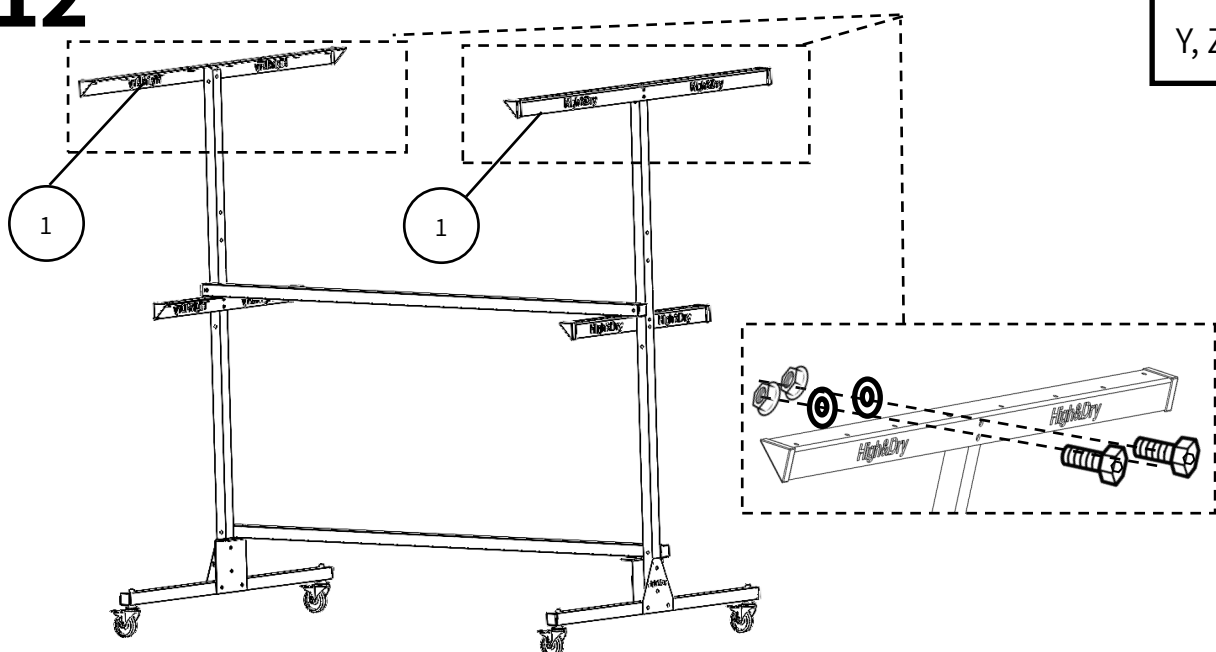

Bx4, Dx4, Ex4


Bolt Top Horizontal to Upright

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.


High&Dry Assembly Instructions

13

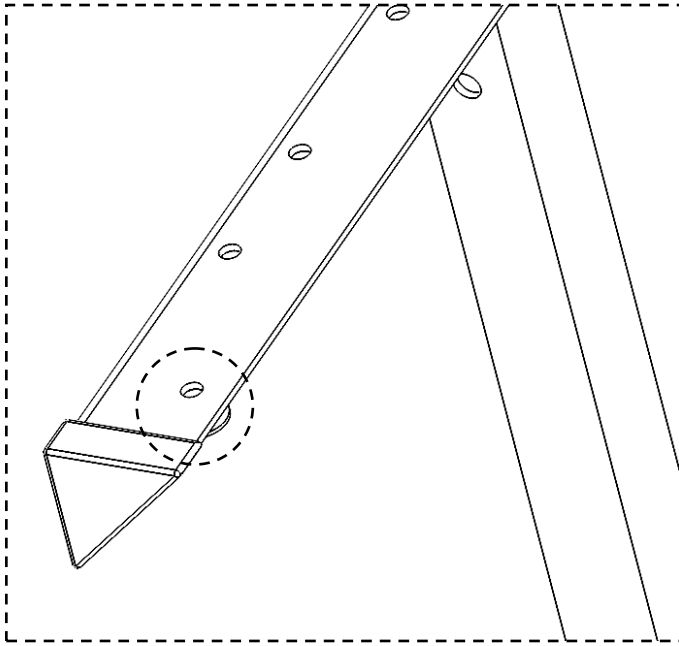

Locate innermost cord holder on Top Horizontal

14

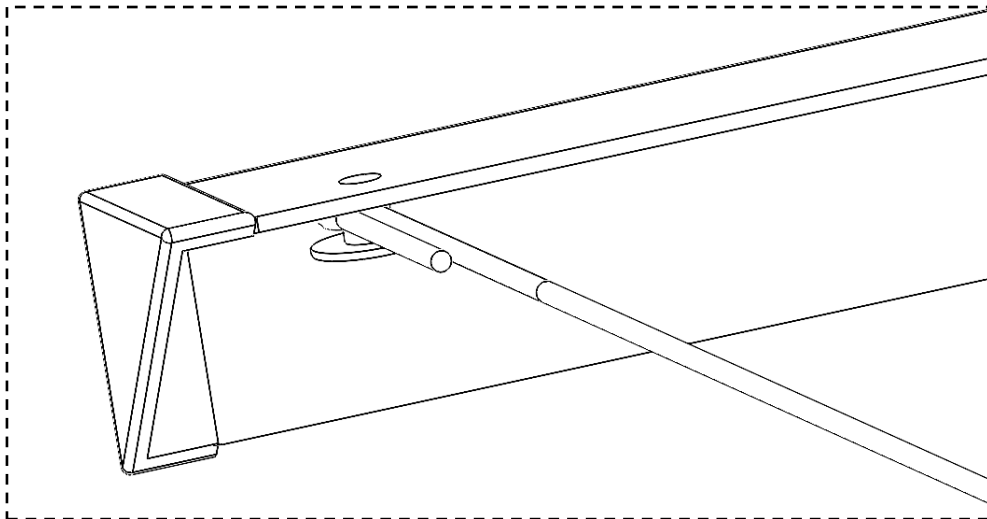


Feed end of first Washing Line around innermost cord holder on Top Horizontal

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.


High&Dry Assembly Instructions

15

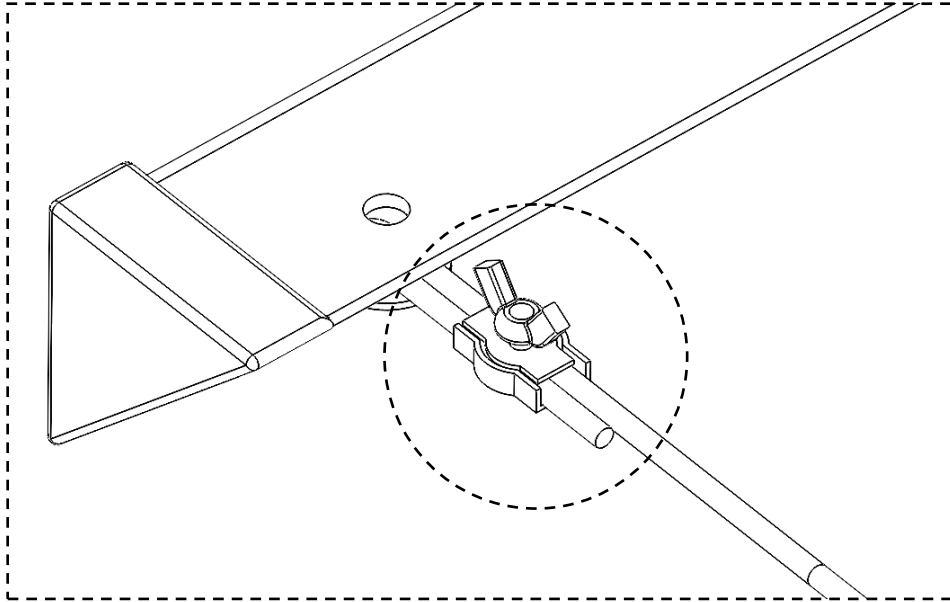

Feed Washing Line through either side of Simplex Clamp bolt, and under plate

16

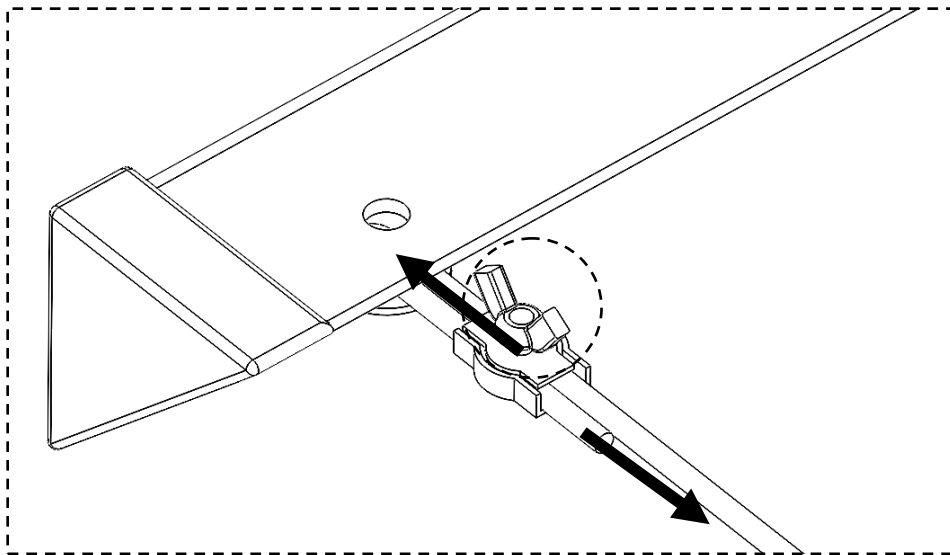


Pull excess Washing Line and Simplex Clamp in directions shown to tighten loop around cord holder. Once complete tighten wing nut to secure

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.


High&Dry Assembly Instructions

17

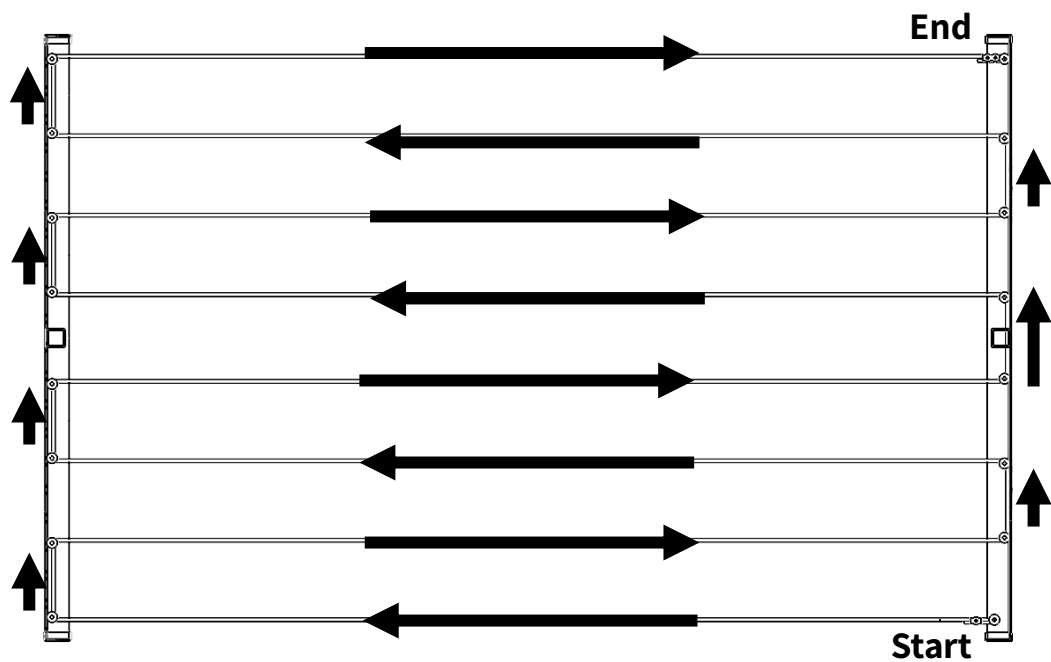

Feed Washing Line around cord holders in pattern shown

18

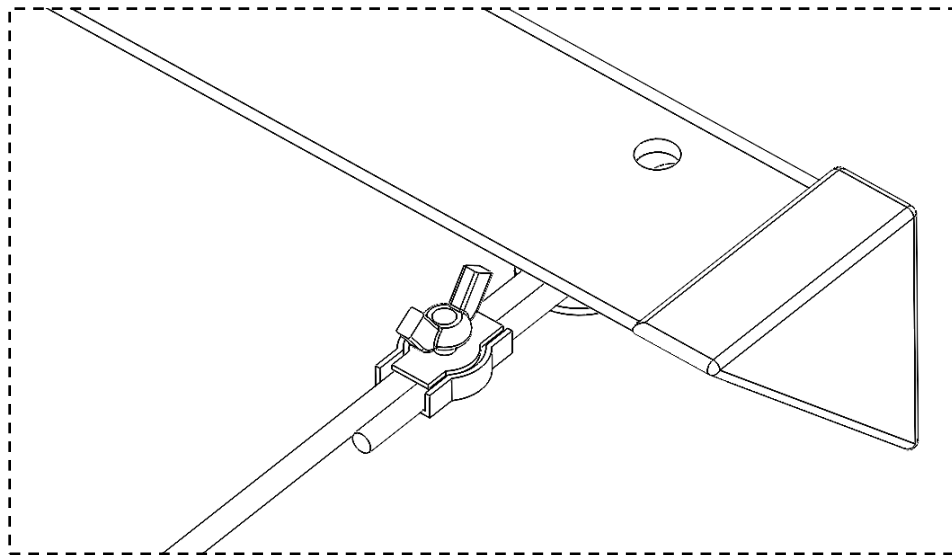


Repeat Simplex Clamp process around End cord holder. Ensure excess cord removed through removal of slack at each junction

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.


High&Dry Assembly Instructions

19

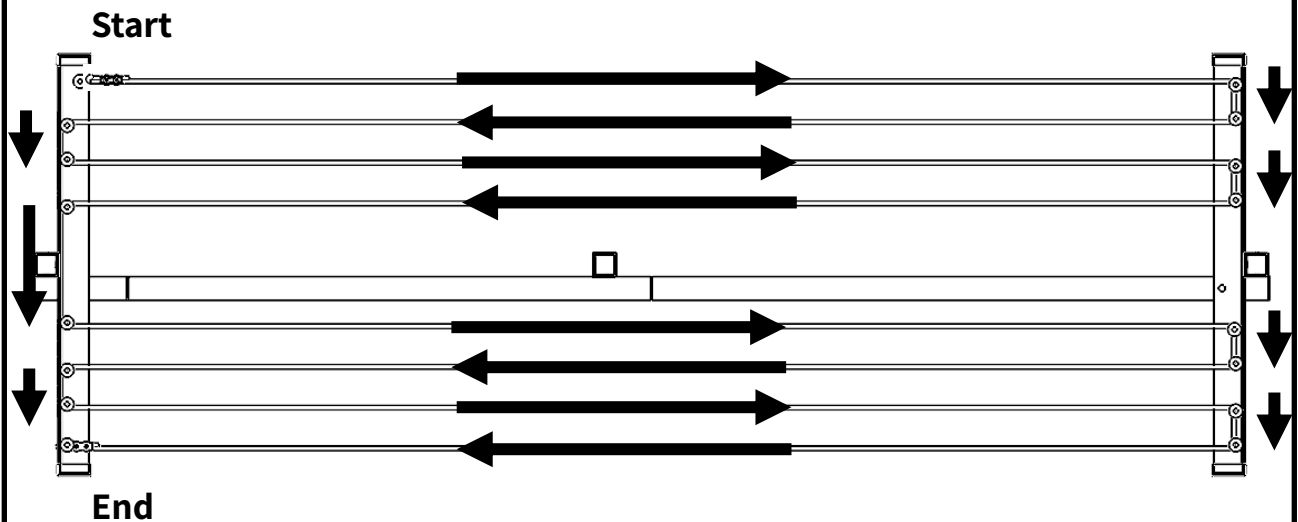

Repeat for bottom Washing Line

20

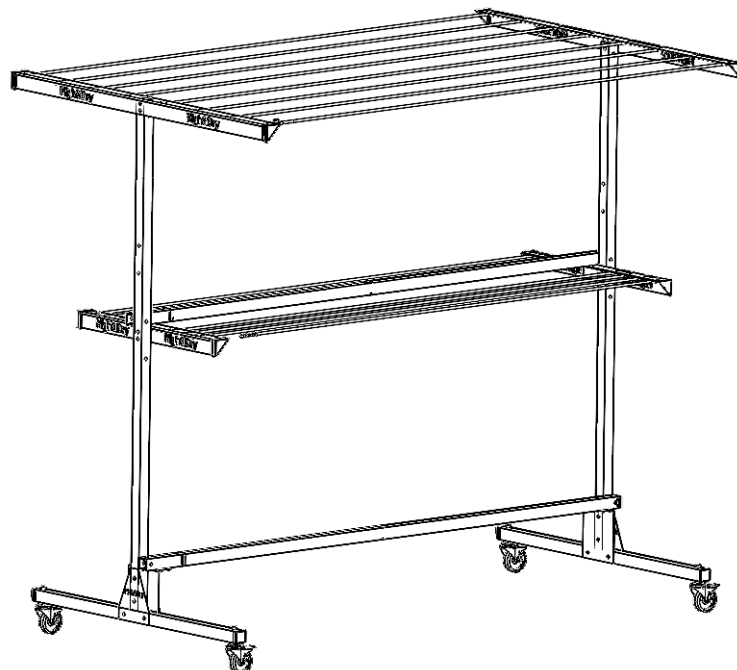

You should now be ready for your first loads of washing

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.

High&Dry Assembly Instructions

Information

We suggest you retain these instructions for future reference.

Keep fittings out of children's reach and keep children well away from construction area.

This product should only be used on firm, level ground.

Two persons are required to assemble this item safely.

Please periodically check all fittings and re-tighten as necessary.

Please note that whilst designed to be wind resistant, the manufacturer recommends that it is not used outside in high wind conditions.

The manufacturer emphasises that the product is not a play area and therefore advises that safety awareness is observed at all times.

Broken line wire should be repaired immediately to avoid any potential hazards.

Do's

We suggest you spend a short time reading through this leaflet before you start.

When you are ready to start, make sure that you have the right tools, plenty of space.

Due to the size of this product we recommend that it is assembled in the area intended for initial use.

Unwrap all packaging materials and place the components on a clean surface to protect them from damage.

We recommend that the packaging is used to protect the surfaces during assembly.

Carefully check that you have all the parts before beginning assembly.

Ensure the product is fully assembled as illustrated and all fixings are fully tightened before use. Check fixings regularly to ensure they remain tight.

Don'ts

Do not over tighten screws or bolts.

Do not use this product if parts are missing, damaged or worn.

Missing parts / Help

If you are missing any fixtures and fittings, or require additional assistance for your product please contact our customer service team on sales@highdry.co.uk

Maintenance

As wheels can wear in time, please ensure the braking wheels are locking firmly. New wheels can be purchased when required.

Occasionally use maintenance spray around the braking mechanism to minimise corrosion and prolong life expectancy of wheels

Line wire should be wiped periodically and tensioned when required

To view our full range please visit
www.highanddryonline.co.uk



No additional
tools required



Time to assemble:
30 minutes



Two persons
required



Help available
if required

Washing Lines. But Better.

save space, **save** money, **save** nature, **live** life.