

HEBEI **Hope**sun

Industry & Trade Corp




Gabion



Höpa+sunny®



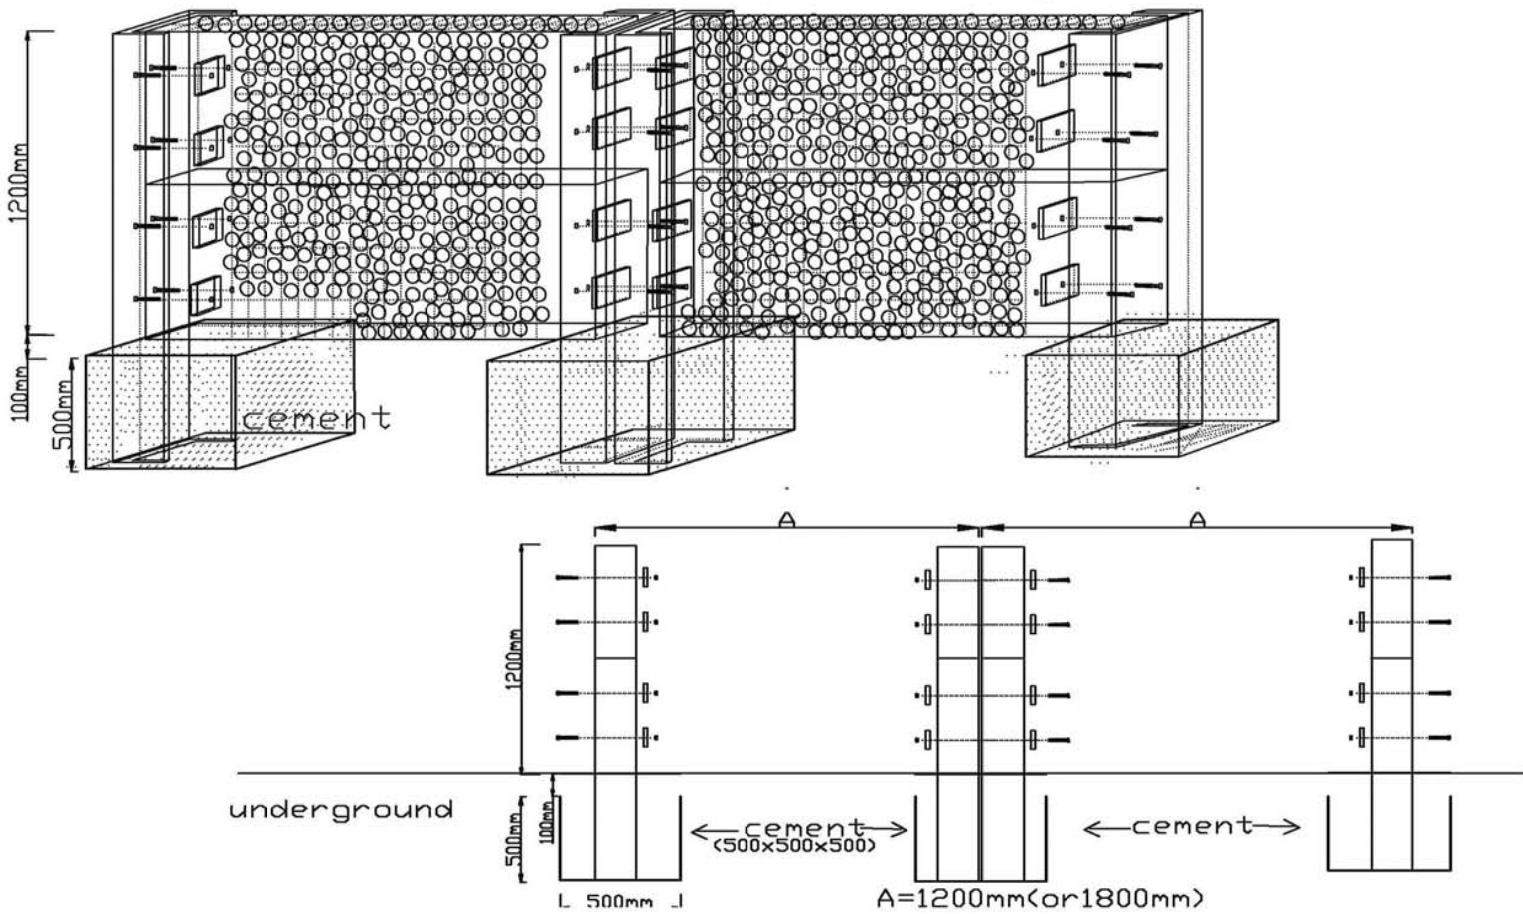

ASSEMBLY:

STEP ONE:

PUT 2PCS "U" POST WITH DRILLED INTO CEMENT, THE DISTANCE BETWEEN THE "U" POST BASED ON THE WALL GABIONS'S LENGTH YOU CHOOSE.

STEP TWO:

PLACE WALL GABION ON BETWEEN "U"POST, MUST KEEP THE LID OPEN.

STEP THREE:

FIX PLATE WITH DRILLED, "U" POST AND WALL GABION TOGETHER, USING BOLTS AND SCREWS TO FIX.



1.FIXED METHOD IN START AND END'S WALL GABIONS: WE CAN USE BOLT, THROUGH PLATE'S DRILL HOLE, WALL GABION'S MESH AND POST'S DRILL HOLE, THEN USING NUT FIXED WELL.

2.FIXED METHOD IN THE MIDDLE OF THE TWO WALL GABIONS: WE ALSO USE BOLT, THROUGH THE FIRST PLATE'S DRILL, THE FISRT WALL GABION'S MESH, TWO BACK TO BACK "U" POST'S DRILL HOLE, THE SECOND WALL GABION'S MESH, AND THE SECOND PLATE'S DRILL HOLE, THEN USING NUT FIXED WELL.

STEP FOUR:

FILL STONES INTO WALL GABIONS, THEN COVER ABOVE LID.

IF YOU WANT TO PLACE MANY GABIONS, PLESE REPEAT STEP 2-4 FOR EACH GABION.

Höpa+sunny®



HEBEI HOPESUN INDUSTRY & TRADE CORP
NO.91 GUANG AN STREET SHIJIAZHUANG CHINA

zouran@hbindustry.com

www.hbindustry.com TEL:86 311 86661058 FAX:86 311 86661061